



Zawór powietrzny

Air valve

VA

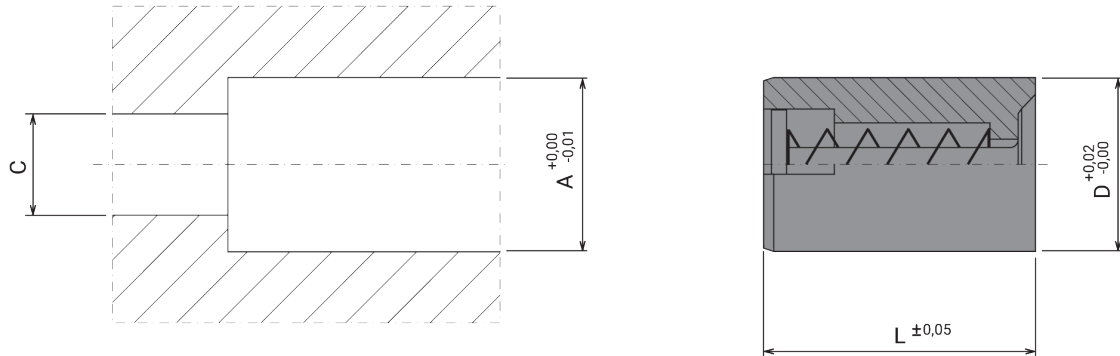

Przykłady instalacji
Examples of installation

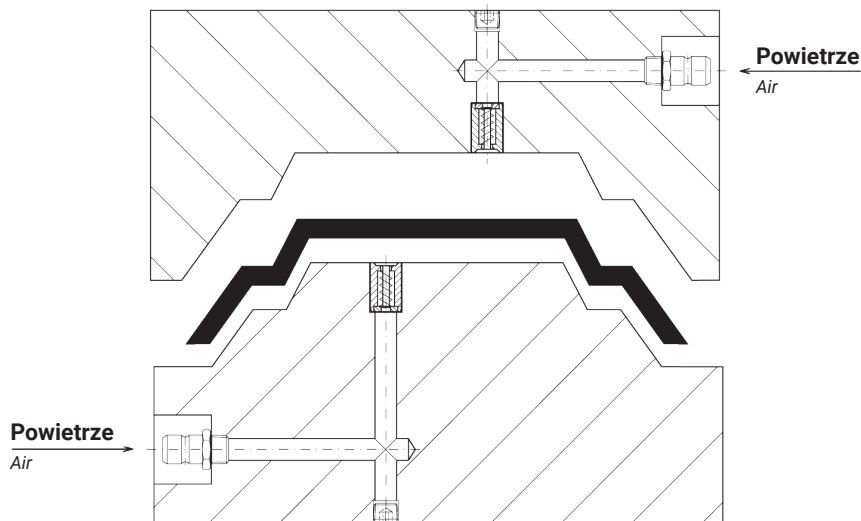

NR KAT.	D	L	A	C
VA-08	8	15	8	6
VA-10	10	20	10	8
VA-12	12	25	12	10
VA-16	16	30	16	14
VA-20	20	30	20	18
VA-25	25	30	25	23
VA-30	30	30	30	28