

d1	d2	b1	d3	b2	d1 <sup>3)</sup>		Housing bore		Shaft size		Part No.
					Max.	Min.	Max.	Min.	Max.	Min.	
1/8	3/16	3/16	.3120	.0320	.1269	.1251	.1878	.1873	.1243	.1236	<b>JFI-0203-03</b>
1/8	1/4	3/8	.3600	.0470	.1280	.1262	.2515	.2510	.1250	.1241	<b>JFI-0204-06</b>
3/16	1/4	1/8	.3750	.0320	.1905	.1887	.2515	.2510	.1875	.1866	<b>JFI-0304-02</b>
3/16	1/4	1/4	.3750	.0320	.1892	.1873	.2503	.2497	.1865	.1858	<b>JFI-0304-04</b>
3/16	1/4	3/8	.3750	.0320	.1892	.1873	.2503	.2497	.1865	.1858	<b>JFI-0304-06</b>
3/16	1/4	1/2	.3750	.0320	.1892	.1873	.2503	.2497	.1865	.1858	<b>JFI-0304-08</b>
3/16	5/16	3/8	.3700	.0470	.1905	.1887	.3140	.3135	.1875	.1866	<b>JFI-0305-06</b>
3/16	5/16	1/2	.3700	.0470	.1905	.1887	.3140	.3135	.1875	.1866	<b>JFI-0305-08</b>
1/4	5/16	1/4	.4370	.0320	.2521	.2498	.3128	.3122	.2490	.2481	<b>JFI-0405-04</b>
1/4	5/16	1/2	.5000	.0320	.2521	.2498	.3128	.3122	.2490	.2481	<b>JFI-0405-06</b>
1/4	5/16	3/8	.4370	.0320	.2521	.2498	.3128	.3122	.2490	.2481	<b>JFI-0405-08</b>
1/4	5/16	3/4	.4370	.0320	.2521	.2498	.3128	.3122	.2490	.2481	<b>JFI-0405-12</b>
1/4	3/8	3/16	.5600	.0470	.2539	.2516	.3765	.3760	.2500	.2491	<b>JFI-0406-03</b>
1/4	3/8	1/4	.5600	.0470	.2539	.2516	.3765	.3760	.2500	.2491	<b>JFI-0406-04</b>
1/4	3/8	1/2	.5600	.0470	.2539	.2516	.3765	.3760	.2500	.2491	<b>JFI-0406-08</b>
5/16	3/8	1/4	.5000	.0320	.3148	.3125	.3753	.3747	.3115	.3106	<b>JFI-0506-04</b>
5/16	3/8	3/8	.5000	.0320	.3148	.3125	.3753	.3747	.3115	.3106	<b>JFI-0506-06</b>
5/16	3/8	1/2	.5000	.0320	.3148	.3125	.3753	.3747	.3115	.3106	<b>JFI-0506-08</b>
5/16	7/16	1/2	.5600	.0620	.3164	.3141	.4390	.4385	.3125	.3116	<b>JFI-0507-08</b>
3/8	15/32	1/4	.6870	.0460	.3773	.3750	.4691	.4684	.3740	.3731	<b>JFI-0607-04</b>
3/8	15/32	3/8	.6870	.0460	.3773	.3750	.4691	.4684	.3740	.3731	<b>JFI-0607-06</b>
3/8	15/32	1/2	.6870	.0460	.3773	.3750	.4691	.4684	.3740	.3731	<b>JFI-0607-08</b>
3/8	15/32	3/4	.6870	.0460	.3773	.3750	.4691	.4684	.3740	.3731	<b>JFI-0607-12</b>
3/8	1/2	3/16	.6250	.0620	.3789	.3766	.5015	.5010	.3750	.3741	<b>JFI-0608-03</b>
3/8	1/2	3/8	.6250	.0620	.3789	.3766	.5015	.5010	.3750	.3741	<b>JFI-0608-06</b>
3/8	1/2	1/2	.6250	.0620	.3789	.3766	.5015	.5010	.3750	.3741	<b>JFI-0608-08</b>
7/16	17/32	1/2	.7500	.0460	.4406	.4379	.5316	.5309	.4365	.4355	<b>JFI-0708-08</b>
1/2	19/32	1/4	.8750	.0460	.5030	.5003	.5941	.5934	.4990	.4980	<b>JFI-0809-04</b>
1/2	19/32	3/8	.8750	.0460	.5030	.5003	.5941	.5934	.4990	.4980	<b>JFI-0809-06</b>
1/2	19/32	1/2	.8750	.0460	.5030	.5003	.5941	.5934	.4990	.4980	<b>JFI-0809-08</b>
1/2	19/32	3/4	.8750	.0460	.5030	.5003	.5941	.5934	.4990	.4980	<b>JFI-0809-12</b>
1/2	19/32	1	.8750	.0460	.5030	.5003	.5941	.5934	.4990	.4980	<b>JFI-0809-16</b>
1/2	5/8	1/4	.8750	.0620	.5047	.5020	.6260	.6250	.5000	.4990	<b>JFI-0810-04</b>
1/2	5/8	1/2	.8750	.0620	.5047	.5020	.6260	.6250	.5000	.4990	<b>JFI-0810-08</b>
1/2	5/8	5/8	.8750	.0620	.5047	.5020	.6260	.6250	.5000	.4990	<b>JFI-0810-10</b>
1/2	5/8	3/4	.8750	.0620	.5047	.5020	.6260	.6250	.5000	.4990	<b>JFI-0810-12</b>
5/8	23/32	1/2	.9370	.0460	.6280	.6253	.7192	.7184	.6240	.6230	<b>JFI-1011-08</b>
5/8	23/32	3/4	.9370	.0460	.6280	.6253	.7192	.7184	.6250	.6240	<b>JFI-1011-12</b>
5/8	23/32	1	.9370	.0460	.6280	.6253	.7192	.7184	.6250	.6240	<b>JFI-1011-16</b>
5/8	3/4	1/2	1.0000	.0620	.6297	.6270	.7510	.7500	.6250	.6240	<b>JFI-1012-08</b>
5/8	3/4	3/4	1.0000	.0620	.6297	.6270	.7510	.7500	.6250	.6240	<b>JFI-1012-12</b>
5/8	3/4	1	1.0000	.0620	.6297	.6270	.7510	.7500	.6250	.6240	<b>JFI-1012-16</b>
3/4	7/8	1/2	1.1250	.0620	.7541	.7505	.8755	.8747	.7491	.7479	<b>JFI-1214-08</b>
3/4	7/8	5/8	1.1250	.0620	.7541	.7505	.8755	.8747	.7491	.7479	<b>JFI-1214-10</b>

<sup>3)</sup> After press-fit. Testing methods ▶ Page 57

d1	d2	b1	d3	b2	d1 <sup>3)</sup>		Housing bore		Shaft size		Part No.
					Max.	Min.	Max.	Min.	Max.	Min.	
3/4	7/8	3/4	1.1250	.0620	.7541	.7505	.8755	.8747	.7491	.7479	<b>JFI-1214-12</b>
3/4	7/8	1	1.1250	.0620	.7541	.7505	.8755	.8747	.7491	.7479	<b>JFI-1214-16</b>
3/4	1	3/4	1.2500	.1560	.7559	.7525	1.0010	1.00	.7500	.7490	<b>JFI-1216-12</b>
3/4	1	1	1.2500	.1560	.7559	.7525	1.0010	1.00	.7500	.7490	<b>JFI-1216-16</b>
7/8	1	1/2	1.2500	.0620	.8791	.8757	1.0005	.9997	.8741	.8729	<b>JFI-1416-08</b>
7/8	1	3/4	1.2500	.0620	.8791	.8757	1.0005	.9997	.8741	.8729	<b>JFI-1416-12</b>
7/8	1	1	1.2500	.0620	.8791	.8757	1.0005	.9997	.8741	.8729	<b>JFI-1416-16</b>
7/8	1	1 1/16	1.1250	.0620	.8809	.8776	1.0010	1.00	.8750	.8740	<b>JFI-141618-11</b>
1	1 1/8	1/2	1.3750	.0620	1.0041	1.0007	1.1255	1.1247	.9991	.9979	<b>JFI-1618-08</b>
1	1 1/8	3/4	1.3750	.0620	1.0041	1.0007	1.1255	1.1247	.9991	.9979	<b>JFI-1618-12</b>
1	1 1/8	1	1.3750	.0620	1.0041	1.0007	1.1255	1.1247	.9991	.9979	<b>JFI-1618-16</b>
1	1 1/4	3/4	1.5000	.1880	1.0059	1.0025	1.2510	1.250	1.0000	.9990	<b>JFI-1620-12</b>
1	1 1/4	1	1.5000	.1880	1.0059	1.0025	1.2510	1.250	1.0000	.9990	<b>JFI-1620-16</b>
1	1 1/4	1 1/2	1.5000	.1880	1.0059	1.0025	1.2510	1.250	1.0000	.9990	<b>JFI-1620-24</b>
1 1/4	1 13/32	1	1.6870	.0780	1.2548	1.2508	1.4068	1.4058	1.2488	1.2472	<b>JFI-2022-16</b>
1 1/4	1 13/32	1 1/4	1.6870	.0780	1.2548	1.2508	1.4068	1.4058	1.2488	1.2472	<b>JFI-2022-20</b>
1 1/4	1 1/2	1	1.7500	.1880	1.2600	1.2531	1.5005	1.4995	1.2500	1.2490	<b>JFI-2024-16</b>
1 1/4	1 1/2	1 1/2	1.7500	.1880	1.2600	1.2531	1.5005	1.4995	1.2500	1.2490	<b>JFI-2024-24</b>
1 1/2	1 21/32	1	2.0000	.0780	1.5048	1.5008	1.6568	1.6558	1.4988	1.4972	<b>JFI-2426-16</b>
1 1/2	1 21/32	1 1/2	2.0000	.0780	1.5048	1.5008	1.6568	1.6558	1.4988	1.4972	<b>JFI-2426-24</b>
1 1/2	1 3/4	1	2.0000	.1250	1.5100	1.5032	1.7505	1.7495	1.5000	1.4990	<b>JFI-2428-16</b>
1 1/2	1 3/4	1 1/2	2.0000	.1250	1.5100	1.5032	1.7505	1.7495	1.5000	1.4990	<b>JFI-2428-24</b>
1 5/8	1 7/8	1	2.1250	.1250	1.6350	1.6882	1.8755	1.8745	1.6250	1.6240	<b>JFI-2630-16</b>
1 3/4	1 15/16	2	2.3750	.0930	1.7547	1.7507	1.9381	1.9371	1.7487	1.7471	<b>JFI-2831-32</b>
2	2 3/16	2	2.6250	.0930	2.0057	2.0011	2.1883	2.1871	1.9981	1.9969	<b>JFI-3235-32</b>

d1	d2	b1	d3	b2	d1 <sup>3)</sup>		Housing bore		Shaft size		Part No.
					Max.	Min.	Max.	Min.	Max.	Min.	
1/8	3/16	3/16	.3120	.0320	.1269	.1251	.1878	.1873	.1243	.1236	<b>J3FI-0203-03</b>
3/16	1/4	1/4	.3750	.0320	.1892	.1873	.2503	.2497	.1865	.1858	<b>J3FI-0304-04</b>
1/4	5/16	3/8	.5000	.0320	.2521	.2498	.3128	.3122	.2490	.2481	<b>J3FI-0405-06</b>
1/4	5/16	1/2	.5000	.0320	.2521	.2498	.3128	.3122	.2490	.2481	<b>J3FI-0405-08</b>
5/16	3/8	1/4	.5620	.0320	.3148	.3125	.3753	.3747	.3115	.3106	<b>J3FI-0506-04</b>
5/16	3/8	3/8	.5620	.0320	.3148	.3125	.3753	.3747	.3115	.3106	<b>J3FI-0506-06</b>
5/16	3/8	1/2	.5620	.0320	.3148	.3125	.3753	.3747	.3115	.3106	<b>J3FI-0506-08</b>
3/8	15/32	1/4	.6870	.0460	.3773	.3750	.4691	.4684	.3740	.3731	<b>J3FI-0607-04</b>
3/8	15/32	3/8	.6870	.0460	.3773	.3750	.4691	.4684	.3740	.3731	<b>J3FI-0607-06</b>
3/8	15/32	1/2	.6870	.0460	.3773	.3750	.4691	.4684	.3740	.3731	<b>J3FI-0607-08</b>
3/8	15/32	3/4	.6870	.0460	.3773	.3750	.4691	.4684	.3740	.3731	<b>J3FI-0607-12</b>
7/16	17/32	1/2	.7500	.0460	.4406	.4379	.5316	.5309	.4365	.4355	<b>J3FI-0708-08</b>
1/2	19/32	1/4	.8750	.0460	.5030	.5003	.5941	.5934	.4990	.4980	<b>J3FI-0809-04</b>
1/2	19/32	3/8	.8750	.0460	.5030	.5003	.5941	.5934	.4990	.4980	<b>J3FI-0809-06</b>
1/2	19/32	1/2	.8750	.0460	.5030	.5003	.5941	.5934	.4990	.4980	<b>J3FI-0809-08</b>
1/2	19/32	3/4	.8750	.0460	.5030	.5003	.5941	.5934	.4990	.4980	<b>J3FI-0809-12</b>

<sup>3)</sup> After press-fit. Testing methods ▶ Page 57