

# Ri4Power accessories

## Switch-disconnector-fuse section



### Connection bracket

#### for switch-disconnector-fuse section

For connecting Maxi-PLS or Flat-PLS main busbar systems to distributor busbar systems of the switch-disconnector-fuse sections, no drilling required.

**Material:**  
E-Cu

**Supply includes:**  
Assembly parts.



#### Also required:

- Maxi-PLS contact makers, 60 mm, see page 329.
- Flat-PLS contact makers, 60 mm, see page 334.
- Terminal block, distribution busbar, see page 358.

#### For enclosure depth 600 mm

For system	For application	For conductor	Packs of	Model No. SV
Flat-PLS 60	Roof section/base section	L1, L2, L3	1 set	<b>9674.451</b>
Flat-PLS 60	Roof section/base section	N	1 set	<b>9674.452</b>
Flat-PLS 100	Roof section/base section	L1, L2, L3	1 set	<b>9674.455</b>
Maxi-PLS 1600/2000	Roof section/base section	L1, L2, L3	1 set	<b>9674.441</b>
Maxi-PLS 1600/2000	Roof section/base section	N	1 set	<b>9674.442</b>
Maxi-PLS 1600/2000	Rear section top/bottom	L1, L2, L3	1 set	<b>9674.461</b>
Maxi-PLS 1600/2000	Rear section top/bottom	N	1 set	<b>9674.462</b>
Maxi-PLS 3200	Roof section/base section	L1, L2, L3	1 set	<b>9674.445</b>

#### For enclosure depth 800 mm

For system	For application	For conductor	Packs of	Model No. SV
Flat-PLS 60	Roof section/base section	L1, L2, L3	1 set	<b>9674.453</b>
Flat-PLS 60	Roof section/base section	N	1 set	<b>9674.454</b>
Flat-PLS 60	Rear section top/bottom	L1, L2, L3	1 set	<b>9674.473</b>
Flat-PLS 60	Rear section top/bottom	N	1 set	<b>9674.474</b>
Flat-PLS 100	Roof section/base section	L1, L2, L3	1 set	<b>9674.457</b>
Flat-PLS 100	Roof section/base section	N	1 set	<b>9674.458</b>
Flat-PLS 100	Rear section top/bottom	L1, L2, L3	1 set	<b>9674.477</b>
Flat-PLS 100	Rear section top/bottom	N	1 set	<b>9674.478</b>
Maxi-PLS 1600/2000	Roof section/base section	L1, L2, L3	1 set	<b>9674.443</b>
Maxi-PLS 1600/2000	Roof section/base section	N	1 set	<b>9674.444</b>
Maxi-PLS 1600/2000	Rear section top/bottom	L1, L2, L3	1 set	<b>9674.463</b>
Maxi-PLS 1600/2000	Rear section top/bottom	N	1 set	<b>9674.464</b>
Maxi-PLS 3200	Roof section/base section	L1, L2, L3	1 set	<b>9674.447</b>
Maxi-PLS 3200	Roof section/base section	N	1 set	<b>9674.448</b>
Maxi-PLS 3200	Rear section top/bottom	L1, L2, L3	1 set	<b>9674.467</b>
Maxi-PLS 3200	Rear section top/bottom	N	1 set	<b>9674.468</b>



### Terminal block, distribution busbar

#### for switch-disconnector-fuse section

For connecting the connection brackets to the distribution busbar system of the switch-disconnector-fuse section, no drilling required.

**Material:**  
E-Cu

**Supply includes:**  
Assembly parts.

**Detailed drawings:**  
Available on the Internet.

For bar width mm	Packs of	Model No. SV
50/60	1	<b>9674.485</b>
80/100	1	<b>9674.488</b>



#### Also required:

- Connection bracket for switch-disconnector-fuse section, see page 358.
- Distribution busbar for switch-disconnector-fuse section, see page 357.